








ASSEMBLY INSTRUCTIONS FOR CC107W24

Hardware check list						
0	1	2	3	4	5	
aX4	bX4	cX2	eX10	fX10	gX1	hX10
						
5/16"X3 1/4"	5/16"X2 1/2"	5/16"X1 1/2"	5/16"	5/16"	wrench	1-1/2"

1. Attach the seat frame to the chair back by using two bolts(c) & two flat washers(e) & two lock washers(f) with wrench(g).
2. Secure seat frame to rear chair legs by using four bolts(a) & four flat washers(e) & four lock washers(f) with wrench(g)
3. Attach front legs to the seat frame & side stretchers by using four bolts(b) & four flat washers(e) & four lock washers(f) with wrench(g).
4. Attach front stretcher to the front legs by using screws(h).
5. Attach side stretchers to the front legs and rear legs by using screws(h).
6. Fix the wood seat to seat frame with 4 screws(h).

Tighten all the bolts with wrench firmly, and make sure that all connections are tight and the product does not wobble before using.

