





# ASSEMBLY INSTRUCTION

ITEM NO: 2120-32  
CHAIRSIDE CABINET

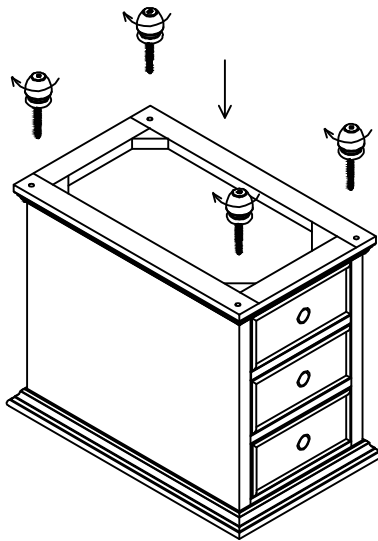

**STEP 1**

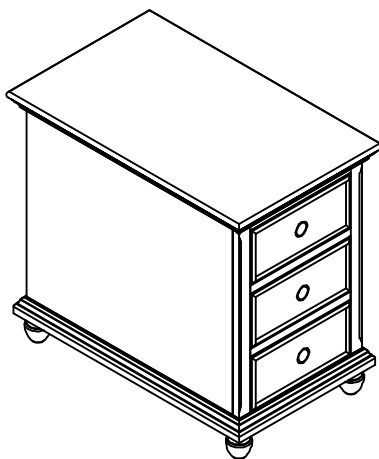

**DO NOT TIGHTEN SCREWS  
UNTIL COMPLETELY ASSEMBLED**