





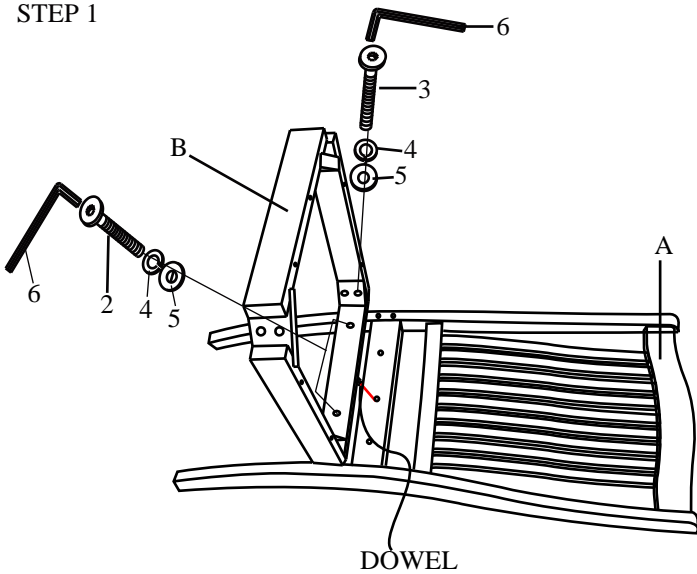
Assembly Instruction

BC107W SLATBACK CHAIR WITH WOODSEAT


NO	Parts List		QTY
A		Chair Back	1pc
B		Box Seat	1pc
C		Hardseat	1pc
D		Front Leg	2pcs

NO	Hardware List		Q'TY
1		Wood Screw	6 PCS
2		JCBC Bolt (Short)	2 PCS
3		JCBC Bolt (Long)	8 PCS
4		Lock Washer	10 PCS
5		Flat Washer	10 PCS
6		Allen Key	1 PC


STEP 1



STEP 2

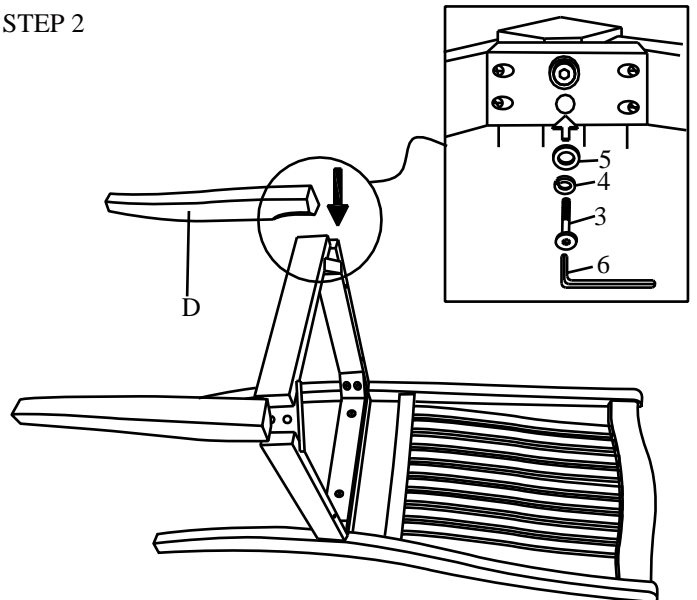

STEP 3

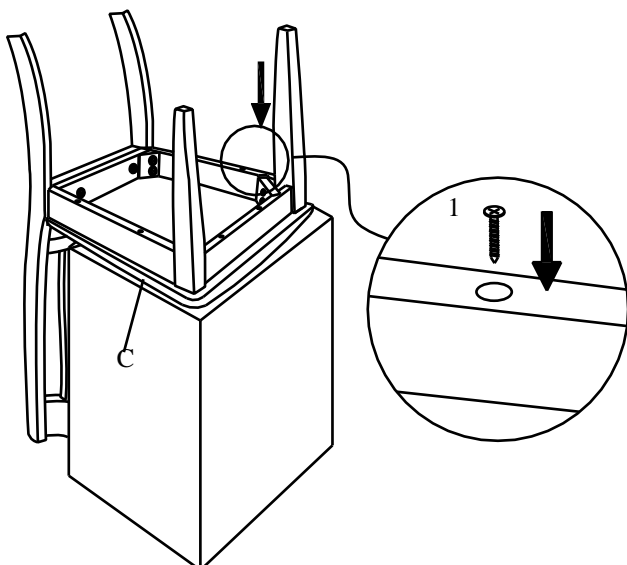

STEP 4

